


KITS P/ AR CONDICIONADO LTDA



265.014

VW 14-170 / 17-310 / 18-310/23-210

SANDEN 7H15 / 5H14

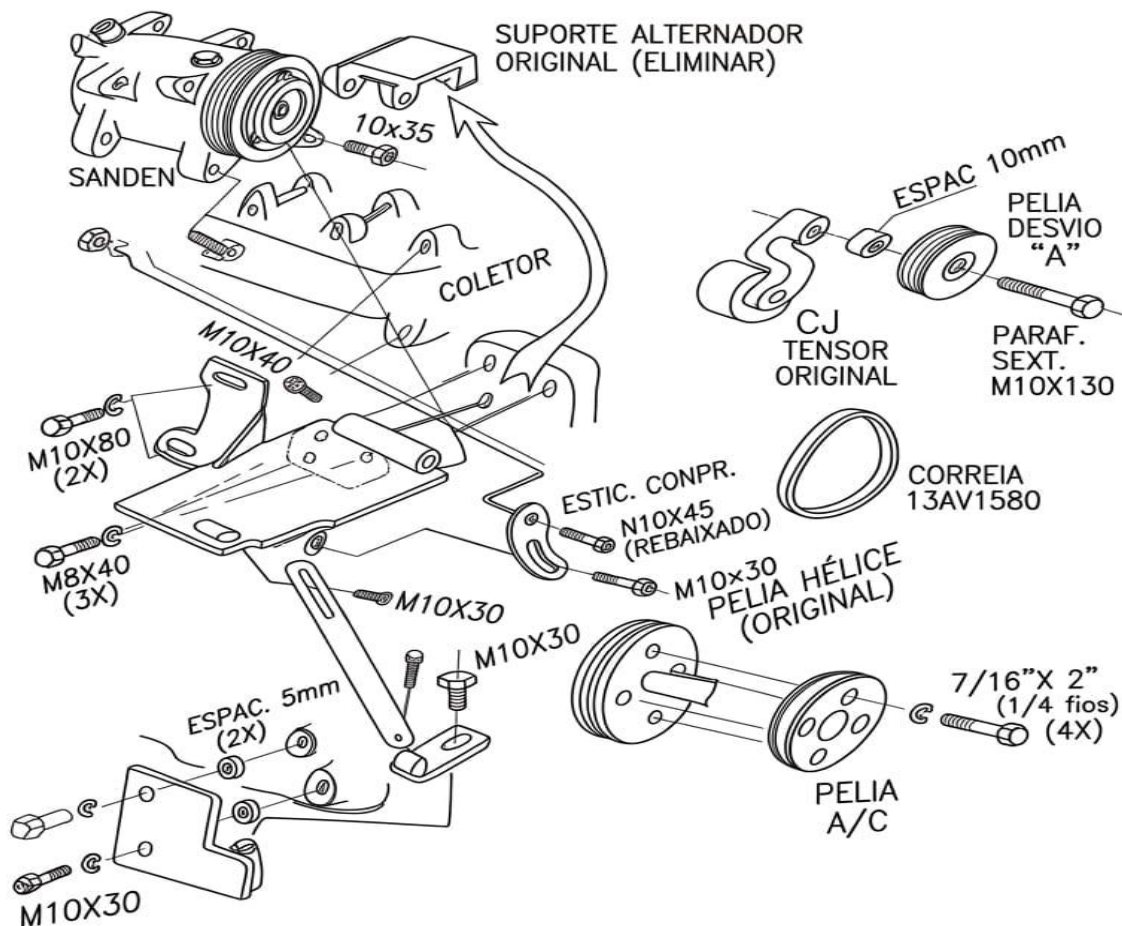

ATENÇÃO


Apertar primeiro o parafuso da orelha da frente do compressor e depois apertar o parafuso da orelha de trás para a bucha deslizar corretamente até dar encosto .

TORQUE DOS PARAFUSOS M8 8.8 Nm 25,497 / 10.9 Nm 35,304 / 12.9 Nm 42,168

M10 8.8 Nm 50,014 / 10.9 Nm 50,014 / 12.9 Nm 85,317

M12 8.8 Nm 87,279 / 10.9 Nm 122,60 / 12.9 Nm 147,10


(NÃO DAMOS GARANTIA DE CORREIAS)

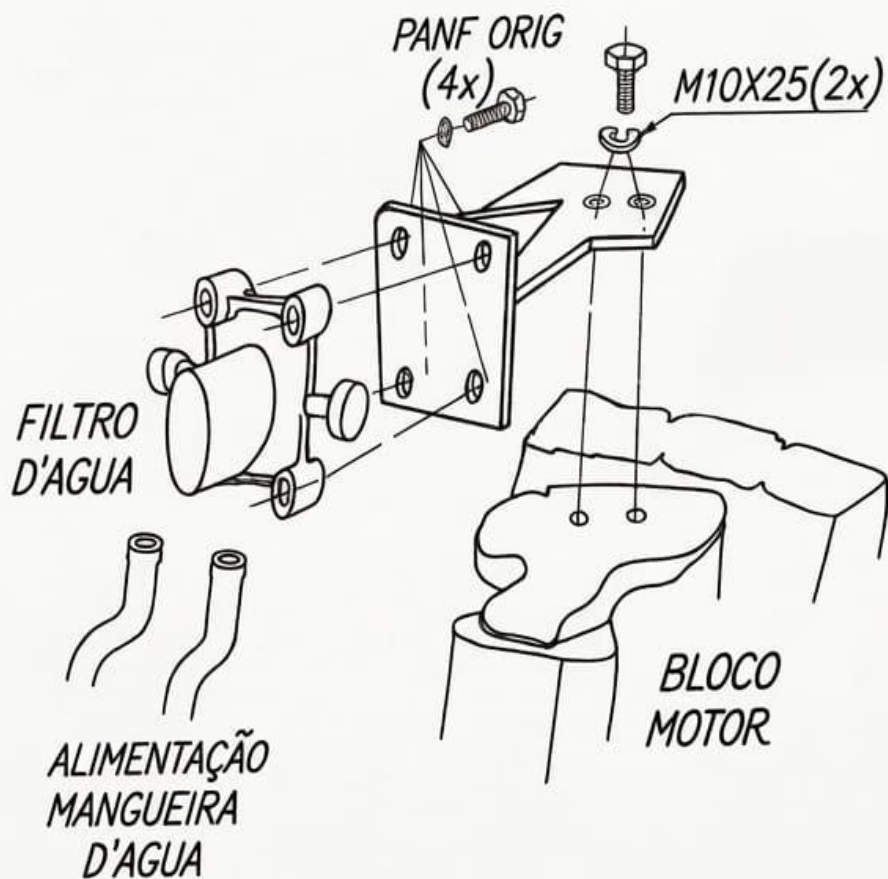

CAMINHÕES

14170
16170
17310
18310
23210

MOTOR
CUMMINS

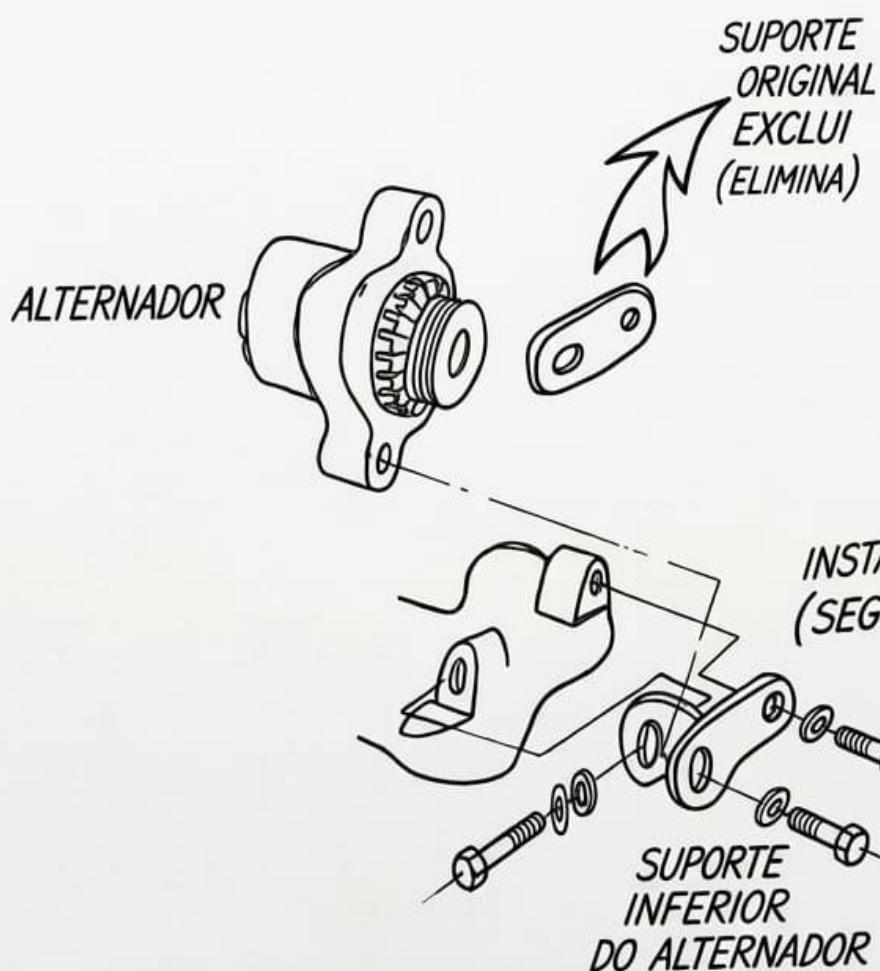

**MUITO
IMPORTANTE!**

SUBSTITUIÇÃO DO
SUPORTE INFERIOR
DO ALTERNADOR

